

"Pool Technology"

Puritron pH+ORP

GSC-102 GSC-202 GSC-302





ENG GEMAS PURITRON INSTRUCTION MANUAL

Preliminary information

"Thank you for your trust and support for Gemas branded products."

GEMAS Salt Chlorine Generator; It has been designed and produced to perform salt electrolysis in small and medium-sized home pools.



The instructions for use must be read carefully before assembly, and the assembly must be done by experienced technicians. Assembled in violation of the assembly instructions; Damages and malfunctions that may occur in products with electrical and water connections are not covered by the warranty. GEMAŞ Salt Chlorine Generator is a device designed and

manufactured for salt electrolysis only in small and medium-sized pools. Using the device, you purchased for other purposes; it can be dangerous both for the device and for the place and people using it.



Connect the ground connection to a proper grounding line. Take electrical power from a line with leakage current protection.



ATTENTION! Serious injuries or even death can result from electric shock. Therefore, seek help from experienced technicians.



In terms of life safety and product; It must be installed in places where children cannot reach.



Installation and commissioning must be carried out by an authorized service or qualified electrician and plumber. Otherwise, the manufacturer and the seller company cannot be held responsible for the problems that may arise due to incorrect installation and commissioning. No repair, maintenance, and replacement parts can be requested under the warranty.

Salt Electrolysis and Advantages

Salt electrolysis; It is the name given to the water purification method that allows the salt in the water to be treated to be converted to free chlorine, which is a strong oxidation agent, by electrolytic treatment. With this technique; There is no need to use a significant part of the chemicals that keep the water clean and hygienic, and the accident and control risks that may arise from this use are eliminated. In damp and hot machine rooms; The risk of fatal accidents that may arise from the mixing of chlorine and acids that emit heavy gases are eliminated with this system.

Short storage period of purchased hypo solutions in summer conditions, loss of concentration due to heat; significantly increases the attractiveness of the system.

Besides, with the high oxidation effect of the produced oxygen radicals as well as chlorine in the process, an extremely bright and clear water quality can be achieved. System; Synchronizer works with the filtration system of the pool and makes disinfection continuous. The convenience of the system in practice is at least as high as the superior water quality and hygiene it provides.

Luminous and hygienic pool water obtained by the process, ease of use provided, great savings, and safety in chemical usage costs; are the basic features that make the system indispensable.

1 – PRODUCT FEATURES

- It produces chlorine in the salt concentration in the same proportion as the tear salinity.
- It has a user-friendly interface that provides ease of use with an LCD screen.
- It has an automatic electrode cleaning feature against calcification.
- Thanks to the measurement and control feature between 0 14pH, the pool always remains at the desired pH.
- It allows the pool to produce as much as for chlorine thanks to ORP measurement between 0 - 1000mV.
- It has a long-lasting titanium electrode.
- It has an electrode life of 16,000 hours.
- It offers the opportunity to adjust to the optimum level by increasing or decreasing the pole change time for cleaning the electrodes.
- Thanks to the LCD screen, it provides the opportunity to display the current at the moment of operation.
- The device records the total working time.
- It can be easily applied to the existing pool.
- The minimum recommended salinity is 4000ppm (4kg / m3).
- The device can also be used in seawater with 35000ppm.

1.1.Technicial Specifications

		GSC102	GSC202	GSC302
Chlorine Production		10 g/h	20 g/h	30 g/h
pH Measurement-Control		0-14 pH	0-14 pH	0-14 pH
ORP Measuren	nent-Control	0-1000mV	0-1000mV	0-1000mV
Supply Voltage	e	220V AC	220V AC	220V AC
Electrode Curr	ent	Max. 2A	Max. 4A	Max. 6A
Electrode Voltage		Max. 24V	Max. 24V	Max. 24V
Power Consumption		50W	100W	150W
Max. Pool	Temperate	50m ³	100m ³	170m ³
Dimensions	Tropical	35m ³	65m ³	110m ³
Maximum Flow		450 l/min	450 l/min	450 l/min
Maximum Pressure		320 Kpa	320 Kpa	320 Kpa
Pressure Drop		5 Кра	5 Kpa	5 Kpa
Cell Type		Bipolar	Bipolar	Bipolar
Salt Concentration		4-35gr/l ppm	4-35gr/l ppm	4-35gr/l ppm
Cell Material		PMMA	PMMA	PMMA
Electrode Material		Titanium	Titanium	Titanium
Device Dimensions		24X32X13cm	24X32X13cm	24X32X13cm
Device Weight		2.4Kg	2.4Kg	2.4Kg
Panel Sizes		78X56X19cm	78X56X19cm	78X56X19cm
Box sizes		81X60X24cm	81X60X24cm	81X60X24cm
Box Weight		11,5Kg	11,5Kg	11,5Kg



2 - ASSEMBLY - INSTALLATION



Assembly and installation must be carried out by an authorized service or qualified electrician and plumber. Otherwise, the manufacturer and the seller company cannot be held responsible for the problems that may arise due to incorrect installation and commissioning. No repair, maintenance, or replacement parts can be requested under the /.

warranty.

For the smooth operation of the device and the safety of life and property, make sure that the following conditions are met by taking the safety precautions regarding electricity and water before starting the installation.



Installation Scheme

Electricity Description



Electrical and mechanical measures have been taken to protect the safety of life and property in the Salt Chlorine Generator. For the electrical precautions to function, the leakage relay and grounding warnings must be taken into consideration.

• Leakage Current Relay: Use a leakage current relay that is CE certified and you are sure that it is working. Make sure the relay you will use controls the generator. Strictly test the Leakage Current Relay every year.



The manufacturer/seller company cannot be held responsible for any problems that may arise from the failure of the Leakage Current Relay being installed, its subsequent malfunction, cancellation, connection of the ground wire, and poor grounding.

- **Supply Cable:** Device supply cable must be at least 3x1.5 mm.
- **Grounding**: Make sure grounding in your facility is well done. Always connect the grounding line of the installation to the device. If necessary, test the ground line. You must also see the voltage value you see between phase and neutral between phase/ground. The voltage value between neutral and ground must be a maximum of 2 V AC.

L-N: 220V AC L-PE: 220V AC

N-PE: Maximum 2V AC

2.1. Control Unit Installation



- 1 Power Cord Input Socket
- 2 Glass Insurance Slot
- 3 Device On / Off (On / Off) Switch
- 4 pH Reducer / Booster Dosing Pump Cable Outlet Gland
- 5 pH Reducer / Booster Fluid Tank Level Sensor Inlet Fitting
- 6 Electrode Cable Outlet Gland
- 7 pH BNC Socket
- 8 Redox BNC Socket

The control unit is mounted on the panel. There are auxiliary elements on the panel that vary depending on the model of the device. On the board; control unit, flow cell, pH sensor, ORP sensor, pH booster/reducer fluid dosing pump, sensor calibration fluids, and test kit.

- A place that will provide easy access and reading must be determined for mounting the control panel.
- The control panel must be in a place with airflow, protected from rain, and without any water leakage hazard.
- If there are acid tanks in the area where the control panel is located, there must be airflow in the environment. Otherwise, electronic components may corrode with the effect of acid.
- The control panel must be thought to be at most 1.5m away from the electrode cell.
- Mark the hole locations on the wall that you will mount for mounting.
- Drill holes in the marked places, fix the control board with the help of dowels and screws.
- Connect the ground wire (yellow and green) of the 220V AC power unit cable to the grounding line of the installation. Connect the phase (brown) and neutral (blue) wires to the outputs of the pump contactor.



Salt chlorine generator must be used parallel to the pump and while the water is circulating in the cell. The device must not be operated without water flow in the cell.

2.2. Electrode Cell Assembly



- 1 Electrode Cable Choke Seal
- 2 Sleeve Electrode Head
- 3 Cable Connection Terminals
- 4 Electrode
- 5 Silicone Gasket Between Electrode and Reservoir
- 6 Electrode Chamber
- 7 Water Inlet Connection Section
- 8 Water Outlet Connection Section
- The electrode cell must be installed in the direction of return to the pool, after the last element (filter, heater, etc.) where water enter



If an automatic pH regulator is installed in the system, the injection of the acid must be after the electrode cell. Otherwise, the electrodes interact with acid and corrode. The manufacturer and the seller cannot be held responsible for any damages and problems caused by this reason. No repair, maintenance, or replacement parts can be requested under the warranty.

- Hard PVC adhesive must be used for pipe mounting to the electrode chamber and must be allowed to dry completely before installing the electrode.
- Electrode; it must be seated in the correct direction. The open part of the electrode must be inserted with the water inlet pipe connection. Make sure the silicone gasket is in place and sealed tightly.
- Connect the electrode cable through the cable choke seal and the threaded electrode head to the cable connection terminals. Close the threaded electrode head.
- It is recommended to install the three-valve bypass circuit as much as possible. In this way, it allows the amount of water passing through the cell to be adjusted and the pool to work while it is removed from the electrode chamber. The bypass circuit in the pump, which operates at a certain power, prevents the electrodes from being damaged by vibration by decreasing the transition speed.
- The electrode cell can be used in a vertical and horizontal position, but it is recommended to use it as vertical as the environment allows. The vertical position allows the emptying of the chamber without pouring water. Besides, enough space is provided to remove the electrode head and electrode.
- If the cell is installed at a height below the filter outlet, gases produced by electrolysis can accumulate in the chamber, which can damage the filtration elements. As seen in this picture, it can be prevented by making a plumbing.



2.3. Pool Water

It is recommended to use mains water for the pool. If you are supplying water from other sources, please analyze the water and make sure that there are no high concentrations of metals and calcium that are not suitable for the operation of the system. Also check the compliance of water with human health standards.

Before operating the salt chlorine generator, adjust the pool water values and discard 1 kg of chlorine stabilizer for 25 m3 of water (20-30 ppm or as specified by the stabilizer manufacturer).



Stabilizer prevents chlorine from disappearing due to UV rays. Stabilizer deficiency forces more chlorine production, which shortens the life of the cell. On the other hand, the high stabilizer affects the disinfection feature of chlorine.

The water of the pool must meet the following values.

Salt		5 – 6 Kg/m ³
pН	Concrete Pool	7.2 - 7.6
	Polyester	6.8 - 7.0
TAC	1	60 – 100 ppm
TH		15 – 20 French
Stabilizer		20 – 30 ppm (or manufacturer's recommendation)
Temperature		>10°C

2.4. Adding Salt

- During the salt addition process, the system must be closed completely until all the salt is dissolved. If the system is operated before the salt is completely dissolved, the cell may get irreversible damage. For this reason, damage will result in the product being out of warranty.
- Calculate the water volume of the pool, salt must be thrown so that there is a salt concentration of 5-6 kg per cubic meter. During this process, make sure that the salt chlorine generator is not connected and do not operate the filtration system for 24 hours.
- In a newly coated pool, wait for 4 weeks after coating without adding salt.
- The dissolution rate of salt can be accelerated by using a pool cleaner. Make sure that the salt concentration is 5-6 kg / m3.
- The salt chlorine generator does not consume salt, but its concentration may decrease due to rain and water supplements.



In cases where you need to add salt, pour the salt as close to the return line as possible. Never pour into skimmers or suction strainers.

3 - COMMISSIONING - USE

- Review the electrical and water installation. Be sure to follow the assembly instructions written above correctly. If there is no deficiency or error, you can start the commissioning process.
- Open the water inlet and water outlet valves, turn off the bypass valve. Make sure there are no water leaks in the valves and the chamber.
- Make sure that phase, neutral and ground wires are properly connected. Remember, the device will work with the pump and shut down with the pump. Open the residual current relay/fuse. Check the supply terminals with the control pen or gauge.
- Turn on the device using the on / off switch at the bottom of the device. The control screen on the front of the device will be energized. There will be a closed mode screen on the control screen.
- The generator will work at the factory settings. If you want to change these settings, you can make the necessary changes with the help of the user guide.

3.1. Control Panel and Settings



1 - 2x16 LCD screen; information and warnings about the device are displayed.

2 - The device performs the functions of ON / OFF (switching on / off), entering the setting menu (the device is turned off, pressed for 3 seconds when it is OFF), and exit the pages and parameters in the setting menu.

3 - Selection of the pages and parameters in the setting menu, performs the functions of confirming and saving the set parameters.

4 - In the settings menu, it performs the functions of passing to the next page or parameter and increasing the parameter values.

5 - In the settings menu, it performs the functions of switching to a sub-page or parameter and decreasing parameter values.



3.1.1. Control Panel Operation Screen Icons and Values

1 - Failure and Warning Part Related to CI Production: This section shows errors and warnings affecting CI production. By pressing the OK button once, the instantaneous current value drawn during production is displayed. Detailed information about faults is described in Fault Codes and Suggested Solutions.

- CL & It states that Cl is produced and the salt level is ideal.
- CL ! It indicates that Cl is produced, but the level of salt is incomplete.
- **ERR1** Indicates a malfunction with the electrode cable.
- **ERR2** Indicates lime between the electrode plates.
- **ERR3** Indicates a short circuit between the electrode cable or electrode plates.



This means that there is a problem with the electronic circuit board, the seller/manufacturer must be contacted.



GEMAŞ Genel Mühendislik Mekanik San.ve Tic.A.Ş.

İTOB Organize Sanayi Bölgesi 10001 Sok.No:28 Menderes/İZMİR TÜRKEY Tel:0232 799 0 333 Fax:0232 799 0 330 www.gemas.com.tr info@gemas.com.tr 2 - CL Production and Polarization Icon: 3 different icons appear in this section:



Right directional polarization symbol.



Reverse polarization icon. Working in reverse polarization does not harm the device. The lime removal feature on the electrodes is activated.

No polarization. Cl is not produced. The device is out of product range or polarization changes are made.

- **3** CL production rate icon can be increased or decreased with the arrow keys.
- This is the part where the measured instant ORP value is shown.
- **Note:** For devices without the ORP measurement feature, no value appears in this section.
- 5 ORP Production Control Mode Icon: 3 different icons appear in this section:



ORP mode: It is OFF. Production of Cl was stopped. If it is desired to change it, it can be changed via ORP SETTINGS> ORP MODE parameter in the Settings menu.



ORP mode: It is ON. Cl is produced continuously. If it is desired to change it, it can be changed via ORP SETTINGS> ORP MODE parameter in the Settings menu.

ORP mode: It is AUTO. Cl is produced according to the value read in the ORP sensor and the ORP 🛙 set value. When the desired value is found, CI production stops automatically. If it is desired to change it, it can be changed via ORP SETTINGS> ORP MODE parameter in the Settings menu.

6 - This is the part where the measured pH value is shown. Note: In devices without a pH measurement feature, no value appears in this section.

7 – pH Reducer / Booster Dosing Control Mode Icon: 3 different icons appear in this section:



pH mode: It is OFF. pH lowering/booster dosing control is off. If it is desired to change it, it can be changed in the Settings menu via the PH SETTINGS> PH MODE parameter.



pH mode: It is in the AUTO position. Reducing/increasing liquid dosing is performed in line with the value read in the pH sensor, the set value, and the type of liquid. If it is desired to change it, it can be changed in the Settings menu via the PH SETTINGS> PH MODE parameter.



pH mode: It is in the AUTO position. Reducing/increasing liquid dosing will be done in line with the value read on the pH sensor, set value, and liquid type. If it is desired to change it, it can be changed in the Settings menu via the PH SETTINGS> PH MODE parameter.

3.2. Setting Menu

The setting menu is an interface with the setting pages and parameters of the device. It allows the device to operate at an optimum level with the changes and adjustments made. The device is switched off to enter the setup menu. An image like the one will be displayed on the LCD screen. The **MENU** button is kept pressed for 3 seconds while the device is in the OFF position. The device will automatically switch to the setting menu.

Setting menu contents are shown in the table on the right. In the table, the setting pages and the parameters in the pages are indicated.

P U R I T R O N G S C 3 O 2

Settings		
1 - POLARITY PERIOD	POLARMA HOUR	
2 - LANGUAGE	ENGLISH	
	TURKISH	
	FRENCH	
	BULGARIAN	
	GERMAN	
	HUNGARIAN	
	SPANISH	
3 - PH SETTINGS	PH MOD	
	PH SET	
	PH TOL.	
	PH BUF. SEC	
	PH CALIBRATION	
	READ PH	
	PH LVL. SEC	
4 - ORP SETTINGS	ORP MOD	
	ORP SET	
	ORP TOL.	
	ORP CALIBRATION	
	READ ORP	
5 - PROGRAM MENU	PASSWORD	

3.2.1. POLARITE PERIOD

Although the physical properties of the water used vary depending on geographical regions, it inevitably contains certain amounts of calcium, magnesium, iron, and other minerals. While the water is cold, these suspended minerals dissociate from the water during electrolysis, some of them stick to the electrodes in the chamber. After a certain period, the electrodes are completely covered with the substance called lime. Since the lime layer is insulating, it complicates the flow of electricity between the electrodes. As a result, chlorine production efficiency decreases. This lime formed in the electrodes must be cleaned periodically.

This cleaning process; It has the feature to do it automatically by changing the polarization. Polarity period page is the page where the polarization change time is set. The OK button is pressed once to enter the page, and to exit the page, the MENU button must be pressed once. When entering the setting page, the parameter value is changed with UP and DOWN direction buttons. When the desired value is given, it is selected and saved with the OK button.

3.2.2.LANGUAGE

It is the page where the working language of the device is set. There are English - TURKISH - FRENCH - BULGAR - GERMAN -HUNGARY - SPANISH languages defined on the device. The OK button is pressed once to enter the page, and to exit the page, the MENU button must be pressed once. The working language is changed with UP and DOWN direction buttons. When the desired working language is displayed, the OK button is pressed once and the working language is selected and saved.



POLARTY PERIOD POLARTY HOUR=8



لې

LANGUAGE ENGLISH

3.2.3. PH SETTINGS

It is the page where pH settings are made. The OK button is pressed once to enter the page, and to exit the page, the MENU button must be pressed once. Direction buttons UP and DOWN are used to switch between parameters on the page.

NOTE: Models without pH measurement feature do not have this setting page.

3.2.3a.pH Mode

It is the parameter that the dosing mode of pH decreasing or rising liquid is set. The OK button is pressed once and the parameter is entered, to exit, the MENU button must be pressed once. UP and DOWN buttons are used to switch between Mod in the parameter. There are three options in this parameter. (OFF - ON - AUTO)

pH Mode OFF: When this Mode is set, the pH portion dosing is turned off, the dosing pump will de-energize. By pressing the OK button once, the mode is selected and saved in the system.

pH Mode ON: When this Mode is set, the pH portion dosing pump is continuously energized and dosing. For safety reasons, it can only be set to ON on the parameter. Once the mode is selected by pressing the OK button once, it is saved as AUTO in the system.

pH Mode AUTO: When this Mode is set, the dosing of the lowering or increasing liquid is done by the value read in the pH sensor and the set value. Dosing stops automatically when the desired value is found.

3.2.3b.pH Set

pH set value; It is the desired pH value of the pool. Dosing is done by comparing the value read with the sensors with the set value entered here. Dosing pH lowering or increasing liquid ensures that the pool is at the desired pH.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The value here is changed with the UP and DOWN directional buttons. When the desired value is given, it is selected and saved with the OK button and the parameter is automatically exited.

3.2.3c.pH Tolerance

pH tolerance; It is the shear of the adjusted pH set value. The reason for giving this value is that dosing does not occur with the effect of fluctuation in the measurement. Thus, a more stable system is created.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The value here is changed with the UP and DOWN directional buttons. When the desired value is given, it is selected and saved with the OK button and the parameter is automatically exited.

PH SETTINGS PH MOD

PH SETTINGS

t

┙

PH SETTINGS PH MOD: OFF

PH SETTINGS PH MOD: ON

PH SETTINGS PH MOD: AUTO

PH SETTINGS PH SET

PH SETTINGS PH SET 7.20

PH SETTINGS PH TOL.

PH SETTINGS PH TOL. 00.10



3.2.3d.pH Buffer Sec

pH buffer flood; It is the parameter that the liquid to be dosed is introduced to the device whether it is a pH reducer or a pH booster.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The situation here is changed with the UP and DOWN directional buttons. When the desired state is given, it is selected and saved with the OK button and the parameter is automatically exited.

3.2.3e.pH Calibration

Measurement values change over time due to the characteristic structure of pH sensors. The change in the sensor measurement value affects the value displayed by the device. For this reason, the sensors must be calibrated periodically with liquids with a known pH value (ph4-pH7). The pH Calibration parameter is used to perform this operation.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The pH sensor is first immersed in the pH4 liquid and the sensor is left in the liquid until the timer on the screen is reset.

When the timer is reset, the pH sensor needs to be immersed in ph7 liquid and a message appears on the screen. The sensor is removed from the pH4 liquid and dried, immersed in the pH7 liquid and pressed the OK button once. The sensor is left in the liquid until the timer on the screen is reset. When the timer is reset, the pH sensor is calibrated.

3.2.3f. pH Read

pH read parameter; It is the parameter that shows the instantaneous value that the pH sensor reads. The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once.

After entering the parameter, a screen like the one shown is displayed. No action is taken, only the reading the sensor displays instantly.

3.2.3g.pH Lvl. Sel.

pH lvl sec parameter; It is the parameter where the optional sensor connected to the pH reducer or booster liquid tank to be dosed is introduced. The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once.

PH LVL. SEL. OFF: It must be selected when there is no sensor connected to the liquid tank to be dosed.

PH LVL. SEL. ON: If there is a sensor connected to the liquid tank to be dosed, it must be selected. Thanks to the connected sensor; the device gives a warning when the liquid in the tank is drained or drops below the specified level. In this case, the device stops the dosing pump and prevents the pump from working and being damaged without liquid.

PH SETTINGS PH BUF. SEL.

PH SETTINGS PH BUF. SEL. (-)



PH SETTINGS PH READ

PH SETTINGS PH READ pH=07.00









3.2.4.ORP SETTINGS

It is the page where ORP (RX) settings are made. The OK button is pressed once to enter the page, and to exit the page, the MENU button must be pressed once. UP and DOWN buttons are used to switch between parameters on the page.

NOTE: Models without ORP (RX) measurement feature do not have this setting page.

3.2.4a.ORP Mode

It is the parameter that the dosing mode of the ORP booster liquid is set. The OK button is pressed once and the parameter is entered, to exit, the MENU button must be pressed once. UP and DOWN buttons are used to switch between Mod in the parameter.

There are three options in this parameter. (OFF - ON - AUTO)

ORP Mode OFF: When this Mode is set, Cl generation is turned off. By pressing the OK button once, the mode is selected and saved in the system.

ORP Mode ON: When this Mode is set, Cl generation is always on. By pressing the OK button once, the mode is selected and saved in the system.

ORP Mode AUTO: When this Mode is set, Cl is produced according to the value read in the ORP sensor and the set value. When the desired value is found, Cl production stops automatically.

3.2.4b.ORP Set

ORP set value; The ORP (RX) value that the pool must have. Dosing is done by comparing the value read with the sensors with the set value entered here. The dosed liquid ensures that the pool is at the desired ORP (RX) value.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The value here is changed with the UP and DOWN directional buttons. When the desired value is given, it is selected and saved with the OK button and the parameter is automatically exited.

3.2.4c.ORP Tolerance

ORP (RX) tolerance; It is the slip share from the set ORP (RX) set value. The reason for giving this value is that dosing does not occur with the effect of fluctuation in the measurement. Thus, a more stable system is created.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The value here is changed with the UP and DOWN directional buttons. When the desired value is given, it is selected and saved with the OK button and the parameter is automatically exited.



ORP SETTINGS

ORP SETTINGS

ORP MOD: OFF

ORP SETTINGS

ORP SETTINGS

ORP MOD: AUTO

ORP MOD: ON

ORP MOD

ORP SETTINGS

ORP SET

ORP SETTINGS ORP SET 0700

ORP SETTINGS ORP TOL.

ORP SETTINGS ORP TOL. 0010



3.2.4d.ORP Calibration

Due to the characteristic structure of ORP (RX) sensors, the measurement values change over time. The change in the sensor measurement value affects the value displayed by the device. For this reason, sensors must be calibrated periodically with fluids with an ORP (RX) value known (475mV). ORP Calibration parameter is used to perform this operation.

The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. The ORP (RX) sensor is immersed in 475mV liquid and the sensor is left in the liquid until the timer on the screen is reset. When the timer is reset, the ORP (RX) sensor is calibrated.

3.2.4e.ORP Read

Read ORP parameter; It is the parameter that shows the instantaneous value that the ORP sensor reads. The OK button is pressed once and the parameter is entered, to exit the parameter, the MENU button must be pressed once. After entering the parameter, a screen like the one shown is displayed. No action is taken, only the reading the sensor displays instantly.

3.2.5.PROGRAM MENU

ORP SETTINGS ORP CALIBRATION

ORP CALIBRATION INSERT PRB 475mV

ORP VAL: 0493mV TIMER: 54

ORP SETTINGS ORP READ

ORP SETTINGS ORP READ 0475

It is the setting page where GEMAŞ technical personnel can intervene. Modifying this page may damage the overall operation of the device.

4 – CLEANING - MAINTENANCE INSTRUCTIONS

4.1. Electrode Cleaning

Although the physical properties of the water used vary depending on geographical regions, it inevitably contains certain amounts of calcium, magnesium, iron, and other minerals. While the water is cold, these suspended minerals decompose from water during electrolysis, some of them stick to the electrodes in the chamber. After a certain period, the electrodes are completely covered with the substance called lime. Since the lime layer is insulating, they complicate the flow of electricity between the electrodes. As a result, chlorine production efficiency decreases. This lime formed in the electrodes must be cleaned periodically.

This cleaning process; It has the feature to do it automatically by changing the polarization. However, in cases where the calcium concentration is too high, this feature may not completely remove the limescale. Regularly check the lime sediment in the cell and, if necessary, clean the cell manually.

- **1-** Turn off the pump and salt chlorine generator.
- 2- Close the water inlet and water outlet valves of the electrode cell.
- **3-** Open the threaded electrode head, properly disconnect the electrode cable from the terminal and remove the electrode from the chamber.
- 4- Ideally, if the electrode is expected to dry for a day, the lime residue releases itself. During the process, be careful not to damage the sensitive cover of the electrode and take care. During this process, never hit with metal material that can scratch the electrode. Pressurized water can be used to dissolve limescale.
- **5-** If the pressurized water could not remove the limescale, you can immerse the electrode in a 20% hydrochloric acid solution. The terminals at the top of the electrode must not touch the solution.
- **6-** Immediately after cleaning, the electrode must be rinsed with clean water, the place of the terminals must be carefully dried and reassembled.

Never leave the electrode in acid for more than 5 minutes! Do not scratch the electrode with metal objects! For safety reasons, keep the acid in water! Never leave the electrode in acid for more than 5 minutes! Do not scratch the electrode with metal objects! Soak the acid in water for safety reasons!

4.2. Advices

The bipolar cells of the GSC salt chlorine generator are manufactured using a special technique, providing an extraordinary period and resistance below the high-quality standards. However, some factors prevent you from getting the full and longest performance from the electrode. These:

- Run with lime residue on the surface of the electrode
- Excessive chlorine concentration (over 3.00 ppm chlorine is corrosive.)
- Working with high or low pH
- Working with salt-free or high concentration salt
- Operating in water below 10 ° C
- Adding salt while the chlorinator is running
- Injecting pH regulator without placing skimmer or bottom strainer

It is recommended to periodically check the cell terminals and lubricate against sulfurization. Situations where you need to turn off the equipment:

- Working without water
- While cleaning the filter
- When emptying the pool
- When the water freezes
- While cleaning the cell

4.3 - Fault Codes and Suggested Solutions

Fault Code	Possible Failure	Solution Way
ERR1	Cable is broken or not touching	Check cable and connection terminals, replace if necessary.
	Electrode wiring problem	Check electrode cable connection terminals.
	Heavy lime	Clean the lime from the cell and reduce the polarity period.
ERR2	There is lime	Clean the lime from the cell and reduce the polarity period.
	The water is too hard	Soften the water.
ERR3	Device output has a short circuit	Check device electrode cable, electrode connection terminals, and replace it if necessary.
ERR4	Electronic card failure	Contact the manufacturer.

5 - WARRANTY - AFTER-SALES SERVICE - SPARE PARTS

- **1.** The electronic cell and rectifier are under a two-year warranty.
- 2. The products are taken out of the scope of warranty by the following items.
 - **a.** Malfunctions caused by using the product contrary to the operating instructions.
 - **b.** Malfunctions due to incorrect electrical connections.
 - c. Faults caused by crash and similar accidents.
 - **d.** Malfunctions that will arise from water in its rectifier.
 - to. Faults resulting from operation without a bypass circuit (according to the wiring diagram).
 - f. Malfunctions caused by acid spillage into the skimmer without turning off the rectifier.

g. Malfunctions caused by insufficient air circulation in the engine room where the acid tank used for disinfection is located.

h. The Puritron; It must not be in the same environment with cleaning equipment, including pumps, filters, and multi-way valves.

TR GEMAŞ PURITRON KULLANMA TALİMATI

Ön Bilgi

"Gemaş markalı ürünlere gösterdiğiniz güven ve desteğiniz için teşekkürler. "

GEMAŞ Tuz Klor Jeneratörü; küçük ve orta ölçekli ev havuzlarında tuz elektrolizi işlemini gerçekleştirmek amacıyla tasarlanmış ve üretilmiştir.



Kullanma talimatı montaj yapılmadan önce dikkatli bir şekilde okunmalı ve montaj işlemi tecrübeli teknisyenler tarafından yapılmalıdır. Montaj talimatına aykırı şekilde montajlanan; elektrik ve su bağlantıları yapılan ürünlerde oluşabilecek hasar ve arızalar garanti kapsamı dışındadır. GEMAŞ Tuz Klor Jeneratörü sadece küçük ve orta ölçekli havuzlarda tuz

elektrolizi işlemi için tasarlanmış ve üretilmiş bir cihazdır. Satın aldığınız cihazı başka amaçlar için kullanmak; gerek cihaz için, gerekse kullanılan mahal ve kullanan kişiler için tehlike arz edebilir.



Topraklama bağlantısını düzgün bir topraklama hattına bağlayınız. Elektrik enerjisini kaçak akım koruması bulunan bir hattan alınız.



DİKKAT! Elektrik çarpması sonucu ciddi yaralanmalar hatta ölümler meydana gelebilir. Bu yüzden tecrübeli teknisyenlerden yardım isteyiniz.



Can güvenliği ve ürün açısından; çocukların ulaşamayacağı yerlere montajı yapılmalıdır.



Montaj ve devreye alma işlemleri kesinlikle yetkili servis veya ehliyetli elektrikçi ve tesisatçı tarafından gerçekleştirilmelidir. Aksi halde hatalı montaj ve devreye almadan kaynaklanabilecek sorunlardan üretici ve satıcı firma sorumlu tutulamaz. Garanti kapsamında tamir, bakım ve parça değişimi talep edilemez.



Tuz Elektrolizi ve Avantajları

Tuz elektrolizi; arıtılacak suyun içerisinde bulunan tuzun elektrolitik işlemle, kuvvetli bir oksidasyon ajanı olan serbest klora dönüştürülmesini sağlayan su arıtma metoduna verilen isimdir. Bu teknikle; suların temiz ve hijyenik kalmasını sağlayan kimyasalların önemli bir kısmının kullanımına gerek kalmamakta, bu kullanımdan kaynaklanabilecek kaza ve kontrol riskleri de ortadan kalkmaktadır. Rutubetli ve sıcak makina dairelerinde; ağır gaz çıkartan klor ve asitlerin birbirine karıştırılmasından doğabilecek ölümcül kaza riskleri bu sistemle ortadan kalkmaktadır.

Satın alınan hipo çözeltilerinin yaz koşullarında depolama süresinin kısalığı, sıcaktan kaynaklı konsantrasyon kaybı; sistemin cazibesini önemli ölçüde arttırmaktadır.

Bunlara ek olarak, proseste klorun yanı sıra üretilen oksijen radikallerinin yüksek oksidasyon etkisi ile son derece ışıltılı ve berrak bir su kalitesi sağlanabilmektedir. Sistem; havuzun filtrasyon sistemi ile birlikte senkrone çalışmakta ve dezenfeksiyonu sürekli kılmaktadır. Sistemin uygulamada getirdiği kolaylık, en az sağladığı üstün su kalitesi ve hijyeni kadar yüksektir.

Prosesle elde edilen ışıltılı ve hijyenik havuz suyu, sağlanan kullanım kolaylığı, kimyasal kullanım masraflarında büyük tasarruf ve emniyet; sistemi vazgeçilmez kılan temel özellikleridir.

1 – ÜRÜN ÖZELLİKLERİ

- Gözyaşındaki tuzluluk ile aynı oranda tuz konsantrasyonundaki suda klor üretir.
- LCD ekran ile kullanım kolaylığı sağlayan kullanıcı dostu bir ara yüze sahiptir.
- Kireçlenmeye karşı otomatik elektrot temizleme özelliği bulunur.
- 0 14pH arası ölçüm ve kontrol özelliği sayesinde havuz sürekli istenilen pH değerinde kalır.
- 0 1000mV arası ORP ölçümü sayesinde havuzun klor ihtiyacı kadar üretim yapmasını sağlar.
- Uzun ömürlü titanyum elektroda sahiptir.
- 16.000 saat elektrot ömrü bulunur.
- Elektrotların temizlenmesi için kutup değişim süresi artırıp azaltılarak optimum seviyeye ayarlama imkanı sunar.
- LCD ekran sayesinde, çalışma anındaki akımı görüntüleme imkanı sağlar.
- Cihaz toplam çalışma süresini kaydeder.
- Mevcut havuza kolaylıkla uygulanabilir.
- Önerilen minimum tuzluluk 4000ppm'dir(4kg/m3).
- Cihaz 35000ppm olan deniz suyunda da kullanılabilir özelliğe sahiptir.

1.1.Teknik Özellikler

		GSC102	GSC202	GSC302
Klor Üretimi		10gr/saat	20gr/saat	30gr/saat
pH Ölçüm-Kontrol		0-14 pH	0-14 pH	0-14 pH
ORP Ölçüm-Ko	ontrol	0-1000mV	0-1000mV	0-1000mV
Besleme Voltajı		220V AC	220V AC	220V AC
Elektrot Akımı		Max. 2A	Max. 4A	Max. 6A
Elektrot Voltajı		Max. 24V	Max. 24V	Max. 24V
Güç Tüketimi		50W	100W	150W
Max. Havuz	Ilıman	50m ³	100m³	170m ³
Ölçüleri	Tropikal	35m ³	65m³	110m ³
Maksimum Debi		450 l/dk	450 l/dk	450 l/dk
Maksimum Basınç		320 Kpa	320 Kpa	320 Kpa
Basınç Kaybı		5 Кра	5 Кра	5 Кра
Hücre Tipi		Bipolar	Bipolar	Bipolar
Tuz Derişimi		4-35gr/l ppm	4-35gr/l ppm	4-35gr/l ppm
Hücre Malzem	esi	PMMA	PMMA	PMMA
Elektrot Malzemesi		Titanyum	Titanyum	Titanyum
Cihaz Ölçüleri		24X32X13cm	24X32X13cm	24X32X13cm
Cihaz Ağırlığı		2.4Kg	2.4Kg	2.4Kg
Pano Ölçüleri		78X56X19cm	78X56X19cm	78X56X19cm
Kutu Ölçüleri		81X60X24cm	81X60X24cm	81X60X24cm
Kutu Ağırlığı		11,5Kg	11,5Kg	11,5Kg



2 - MONTAJ - KURULUM



Montaj ve kurulum işlemleri kesinlikle yetkili servis veya ehliyetli elektrikçi ve tesisatçı tarafından gerçekleştirilmelidir. Aksi halde hatalı montaj ve devreye almadan kaynaklanabilecek sorunlardan üretici ve satıcı firma sorumlu tutulamaz. Garanti kapsamında tamir, bakım ve parça değişimi talep edilemez.

Cihazın sorunsuz çalışabilmesi, can ve mal güvenliğiniz için montaja başlamadan önce elektrik ve su ile ilgili emniyet önlemlerini alarak aşağıdaki koşulların sağlandığından emin olun.

Tesisat Şeması



Elektrik ile İlgili Açıklama



Tuz Klor Jeneratöründe can ve mal güvenliğini korumaya yönelik olarak elektriksel ve mekanik önlemler alınmıştır. Elektriksel önlemlerin işlevini yerine getirebilmesi için mutlaka kaçak akım rölesi ve topraklama ile ilgili uyarıların dikkate alınması gerekmektedir.

• **Kaçak Akım Rölesi:** CE belgeli ve çalıştığından emin olduğunuz bir kaçak akım rölesi kullanın. Kullanacağınız rölenin jeneratörü kontrol ettiğinden emin olun. Kesinlikle her yıl Kaçak Akım Rölesini test edin.



Kaçak Akım Rölesinin takılmamasından, sonradan arızalanmasından, iptal edilmesinden, topraklama kablosunun bağlanmamasından, topraklamanın zayıf olmasından kaynaklanabilecek her türlü sorunlardan üretici/satıcı firma sorumlu tutulamaz.

- Besleme Kablosu: Cihaz besleme kablosu en az 3x1,5mm olmalıdır.
- Topraklama: Tesisinizdeki topraklamanın iyi yapılmış olduğundan emin olun. Tesisatın topraklama hattını mutlaka cihaza bağlayın. Gerekirse topraklama hattını test edin. Faz ile nötr arasında gördüğünüz voltaj değerini faz/toprak arasında da görmeniz gerekmektedir. Nötr ve toprak arası voltaj değeri en çok 2 V AC olmalıdır.

L-N: 220V AC L-PE: 220V AC

N-PE: Maksimum 2V AC



2.1.Kontrol Ünitesi Montajı



- 1 Güç Kablosu Giriş Soketi
- 2 Cam Sigorta Yuvası
- 3 Cihaz Aç/Kapat (On/Off) Anahtarı
- 4 pH Düşürücü/Yükseltici Dozaj Pompası Kablo Çıkış Rakoru
- 5 pH Düşürücü/Yükseltici Sıvısı Tankı Seviye Sensörü Girişi Rakoru
- 6 Elektrot Kablosu Çıkış Rakoru
- 7 pH BNC Soketi
- 8 Redox BNC Soketi

Kontrol ünitesi pano üzerine monte edilmektedir. Pano üzerinde, cihazın modeline göre değişen yardımcı elemanlar bulunmaktadır. Pano üzerinde; kontrol ünitesi, akış hücresi, pH sensörü, ORP sensörü, pH yükseltici/düşürücü sıvısı dozaj pompası, sensör kalibrasyon sıvıları ve test kiti bulunmaktadır.

- Kontrol panosu montajı için kolay ulaşım ve okuma sağlayacak bir yer belirlenmelidir.
- Kontrol panosu hava akışının olduğu, yağmurdan korumalı ve herhangi bir su sızıntısı tehlikesi olmayan bir yerde olmalıdır.
- Kontrol panosunun bulunduğu bölgede asit tankları var ise ortamda hava akışı olması gerekmektedir. Aksi halde asit etkisi ile elektronik komponentler korozyona uğrayabilir.
- Kontrol panosu elektrot hücresine en fazla 1,5m uzakta olacak şekilde düşünülmelidir.
- Montaj işlemi için monte edeceğiniz duvarda pano üzerinden delik yerlerini işaretleyin.
- İşaretlenen yerlere delikler açın, dübel ve vida yardımı ile kontrol panosunu sabitleyin.
- 220V AC güç ünitesi kablosunun topraklama kablosunu (sarı ve yeşil) tesisatın topraklama hattına bağlayın. Faz (kahverengi) ve nötr (mavi) kablolarını pompa kontaktörünün çıkışlarına bağlayın.



Tuz klor jeneratörü pompaya paralel olarak ve su hücrede devir daim olurken kullanılmalıdır. Hücrede su akışı olmadan kesinlikle cihaz çalıştırılmamalıdır.

2.2.Elektrot Hücresi Montajı



- 1 Elektrot Kablo Boğma Contası
- 2 Rakorlu Elektrot Kafası
- 3 Kablo Bağlantı Terminalleri
- **4 –** Elektrot
- 5 Elektrot ve Hazne Arası Silikon Conta
- 6 Elektrot Haznesi
- 7 Su Giriş Bağlantı Kısmı
- 8 Su Çıkış Bağlantı Kısmı

 Elektrot hücresi, havuza dönüş yönünde suyun girdiği son elemandan (filtre, ısıtıcı vb.) sonra olacak şekilde kurulmalıdır.



Eğer sistemde otomatik pH düzenleyici kuruluysa asidin enjeksiyonu elektrot hücresinden sonra olmalıdır. Aksi takdirde elektrotlar asit ile etkileşime girerek korozyona uğrar. Bu sebeple oluşan zarar ve sorunlardan üretici ve satıcı firma sorumlu tutulamaz. Garanti kapsamında tamir, bakım ve parça değişimi talep edilemez.

- Elektrot haznesine boru montajında sert PVC yapıştırıcı kullanılmalı ve elektrotu takmadan önce tamamen kuruması beklenmelidir.
- Elektrot; haznenin içine doğru yönde oturtulmalıdır. Elektrotun açık kısmı su giriş borusu bağlantısına gelecek şekilde sokulmalıdır. Silikon contanın yerinde olduğundan ve sızdırmayacak şekilde yerleştiğinden emin olun.
- Elektrot kablosunu kablo boğma contasından ve rakorlu elektrot kafasından geçirerek kablo bağlantı terminallerine bağlayın. Rakorlu elektrot kafasını kapatın.
- Üç vanalı bypass devresinin mümkün olduğunca kurulması tavsiye edilir. Bu sayede hücreden geçen suyun miktarının ayarlanmasını ve elektrot hazesinden çıkarılırken havuzun çalışmasını sağlar. Belli güçte çalışan pompada bypass devresi, geçiş hızını düşürerek elektrotların titreşimden dolayı zarar görmesini engeller.
- Elektrot hücresi dikey ve yatay pozisyonda kullanılabilir fakat ortamın elverdiği kadarıyla dikey kullanılması önerilir. Dikey pozisyon su dökülmeden haznenin boşaltılmasına olanak sağlar. Bunun yanında elektrot kafasını ve elektrodu çıkartmak için yeterli alan sağlanmış olur.
- Eğer hücre filtre çıkışının altında bir yükseklikte monte edilirse, haznede elektroliz sonucu oluşan gazlar birikebilir ve bu da filtrasyon elemanlarına zarar verebilir. Bu resimde görüldüğü gibi bir tesisat yapılarak engellenebilir.



2.3.Havuz Suyu

Havuz için şebeke suyu kullanmanız tavsiye edilir. Eğer suyu başka kaynaklardan sağlıyorsanız, lütfen suyun analizini yaptırın ve sistemin çalışmasına uygun olmayan yüksek konsantrasyonda metal ve kalsiyum gibi etkenlerin bulunmadığından emin olun. Ayrıca suyun insan sağlığı standartlarına uyumunu da kontrol edin.

Tuz klor jeneratörünü çalıştırmadan önce havuz suyu değerlerini ayarlayın ve 25 m³ su için 1 kg klor stabilizör atın (20-30 ppm veya stabilizör üreticisinin belirttiği kadar)



Stabilizör klorun UV ışınlarından dolayı kaybolmasını engeller. Stabilizör eksikliği daha fazla klor üretimine zorlar ve bu da hücrenin ömrünü kısaltır. Öte yandan yüksek stabilizör de klorun dezenfeksiyon özelliğini düşürecek yönde etkiler.

Havuzun suyu aşağıdaki değerleri karşılamalıdır.

Tuz		5 – 6 Kg/m ³	
рΗ	Beton Havuz	7.2 – 7.6	
	Polyester	6.8 - 7.0	
TAC		60 – 100 ppm	
TH		15 – 20 Fransız	
Stabilizör		20 – 30 ppm (veya üreticinin önerisi)	
Sıcaklık		>10°C	

2.4.Tuz Ekleme

- Tuz ekleme işlemi sırasında tuzun hepsi çözünene kadar sistem tamamen kapatılmalıdır. Tuz tamamen çözünmeden sistemin çalıştırılması durumunda hücre geri döndürülemez hasar alabilir. Bu nedenle oluşacak bir hasar ürünün garanti kapsamından çıkmasına neden olur.
- Havuzun su hacmini hesaplayın, metrekübe 5-6 kg tuz konsantrasyonu olacak şekilde tuz atılmalıdır. Bu işlem sırasında tuz klor jeneratörünün bağlı olmadığından emin olun ve 24 saat filtrasyon sistemini çalıştırmayın.
- Yeni kaplama yapılan bir havuzda, kaplamadan 4 hafta sonraya kadar tuz atmadan bekleyin.
- Tuzun çözünme hızı havuz süpürgesi kullanılarak hızlandırılabilir. Tuz konsantrasyonun 5-6 kg/m³ olduğundan emin olun.
- Tuz klor jeneratörünün tuz tüketimi yoktur, fakat yağmur ve su takviyesi gibi nedenlerle konsantrasyonu düşebilir.



Tuz eklemeniz gereken durumlarda tuzu mümkün olduğunca havuza dönüş hattına yakın dökün. Kesinlikle skimmere veya emiş süzgeçlerine dökmeyin.

3 – DEVREYE ALMA – KULLANIM

- Elektrik ve su tesisatını tekrar gözden geçirin. Yukarıda yazılı olan montaj talimatlarını doğru uyguladığınızdan emin olun. Bir eksiklik ya da hata yoksa devreye alma işlemlerine başlayabilirsiniz.
- Su giriş ve su çıkış vanalarını açın, by pass vanasını kısın. Vanalarda ve haznede su kaçağı olmadığından emin olun.
- Faz, nötr ve topraklama kablolarının doğru bağlandığından emin olun. Unutmayın cihaz pompa ile beraber çalışıp pompa ile beraber kapanacaktır. Kaçak akım rölesini/sigortasını açın. Kontrol kalemi veya ölçü aleti ile besleme klemenslerini kontrol edin.
- Cihazın alt kısmındaki açma /kapama anahtarından cihazı açın. Cihaz ön kısmındaki kontrol ekran enerjilenecektir. Kontrol ekranında kapalı mod ekranı yer alacaktır.
- Jeneratör fabrika ayarlarında çalışacaktır. Bu ayarları değiştirmek isterseniz kullanma kılavuzu yardımı ile gerekli değişiklikleri yapabilirsiniz.

3.1.Kontrol Paneli ve Ayarları



1 – 2x16 LCD ekran; cihaz ile ilgili bilgiler ve uyarılar gösterilir.

2 – Cihaz ON/OFF (kapatıp açma), ayar menüsüne giriş(cihaz kapalı, OFF konumdayken 3sn. basılı tutulur) ve ayar menüsünde sayfalardan ve parametrelerden çıkış fonksiyonlarını gerçekleştirir.

3 – Ayar menüsündeki sayfalarda ve parametrelerde seçim yapma, ayarlanan parametreleri onaylayıp kaydetme fonksiyonlarını gerçekleştirir.
 4 – Ayar menüsünde bir üst sayfaya veya parametreye geçiş ve

4 – Ayar menusunde bir ust sayraya veya parametreye geçiş ve parametre değerlerini arttırma fonksiyonlarını gerçekleştirir.

5 – Ayar menüsünde bir alt sayfaya veya parametreye geçiş ve parametre değerlerini eksiltme fonksiyonlarını gerçekleştirir.

3.1.1.Kontrol Paneli Çalışma Ekranı Simgeleri ve Değerleri



1 – Cl Üretimiyle İlgili Arıza ve Uyarı Kısmı: Bu kısımda Cl üretimini etkileyen hata ve uyarılar gösterilmektedir. **OK** butonuna bir kez basılarak üretim esnasında çekilen anlık akım değeri gösterilmektedir. Arızalar ile ilgili detaylı bilgiler **Arıza Kodları ve Önerilen Çözüm Yolları** kısmında anlatılmıştır.

- CL & Cl üretiminin yapıldığını ve tuz seviyesinin ideal olduğunu ifade eder.
- CL ! Cl üretiminin yapıldığını fakat tuz seviyesinin eksik olduğunu ifade eder.
- **ERR1** Elektrot kablosu ile ilgili arıza olduğunu ifade eder.
- **ERR2** Elektrot plakaları arasında kireç olduğunu ifade eder.
- ERR3 Elektrot kablosu veya elektrot plakaları arasında kısa devre olduğunu ifade eder.
- ERR4 Elektronik devre kartı ile ilgili bir sorun olduğunu ifade eder satıcı/üretici ile irtibata geçilmelidir.

2 – CL Üretim ve Polarizasyon Simgesi: Bu kısımda 3 farklı simge görünür:



Doğru yönlü polarizasyon simgesi.

Ters yönlü polarizasyon simgesi. Ters yönlü polarizasyonda çalışmasının cihaza bir zararı bulunmamaktadır. Elektrodlar üzerindeki kireç temizleme özelliği devrededir.



Polarizasyon yok. Cl üretimi yapılmamaktadır. Cihaz üretim aralığı dışındadır ya da polarizasyon değişikliği yapılmaktadır.

- 3 CL üretim oranı simgesi yön tuşları ile arttırıp azaltılabilmektedir.
- 4 Ölçülen anlık ORP değerinin gösterildiği kısımdır.
- Not:ORP ölçüm özelliği olmayan cihazlarda bu kısımda değer görünmez.
- 5 ORP Üretim Kontrol Modu Simgesi: Bu kısımda 3 farklı simge görünür:



ORP mod: OFF konumdadır. Cl üretimi durdurulmuştur. Değiştirmek istenir ise Ayarlar menüsü üzerinden ORP AYARLAR>ORP MOD parametresi üzerinden değiştirilebilmektedir.

ORP \circ

ORP mod: ON konumdadır. Cl üretimi sürekli yapılmaktadır. Değiştirmek istenir ise Ayarlar menüsü üzerinden ORP AYARLAR>ORP MOD parametresi üzerinden değiştirilebilmektedir.

ORP mod: AUTO konumdadır. ORP sensöründe okunan değer ve SET edilen değer doğrultusunda CI üretimi yapılır. İstenen değer bulunduğunda otomatik olarak CI üretimi durur. Değiştirmek istenir ise Ayarlar menüsü üzerinden ORP AYARLAR>ORP MOD parametresi üzerinden değistirilebilmektedir.

- 6 Ölçülen anlık pH değerinin gösterildiği kısımdır.
 Not:pH ölçüm özelliği olmayan cihazlarda bu kısımda değer görünmez.
- 7 pH Düşürücü/Yükseltici Dozajlama Kontrol Modu Simgesi: Bu kısımda 3 farklı simge görünür:



pH mod: OFF konumdadır. pH düşürücü/yükseltici dozajlama kontrolü kapalıdır. Değiştirmek istenir ise Ayarlar menüsü üzerinden PH AYARLAR>PH MOD parametresi üzerinden değiştirilebilmektedir.



pH mod: AUTO konumdadır. pH sensöründe okunan değer, set edilen değer ve sıvı tipi doğrultusunda düşürücü/yükseltici sıvı dozajlaması yapılmaktadır. Değiştirmek istenir ise Ayarlar menüsü üzerinden PH AYARLAR>PH MOD parametresi üzerinden değiştirilebilmektedir.



pH mod: AUTO konumdadır. pH sensöründe okunan değer, set edilen değer ve sıvı tipi doğrultusunda düşürücü/yükseltici sıvı dozajlaması yapılacaktır. Değiştirmek istenir ise Ayarlar menüsü üzerinden PH AYARLAR>PH MOD parametresi üzerinden değiştirilebilmektedir.

3.2.Ayar Menüsü

Ayar menüsü cihazın ayar sayfalarının ve parametrelerinin bulunduğu bir ara yüzdür. Yapılan değişiklikler ve ayarlamalar ile cihazın optimum seviyede çalışmasına olanak sağlar. Ayar menüsüne giriş için cihaz kapalı (OFF) konuma alınır. LCD ekrana yandaki gibi bir görüntü gelecektir. Cihaz kapalı (OFF) konumda iken **MENU** butonuna 3 saniye basılı tutulur. Cihaz otomatik olarak ayar menüsüne geçiş yapacaktır.

Ayar menüsü içeriği yandaki tabloda gösterilmektedir. Tabloda ayar sayfaları ve sayfaların içerisindeki parametreler belirtilmektedir.

P U R I T R O N G S C 3 O 2

Ayarlar		
1 - POLARİTE PERYODU	POLARMA SAAT	
2 - DİL	İNGİLİZCE	
	TÜRKÇE	
	FRANSIZCA	
	BULGARCA	
	ALMANCA	
	MACARCA	
	İSPANYOLCA	
3 - PH AYARLARI	PH MOD	
	PH SET	
	PH TOL.	
	PH BUF. SEC	
	PH KALİBRASYON	
	PH OKU	
	PH LVL. SEC	
4 - ORP AYARLARI	ORP MOD	
	ORP SET	
	ORP TOL.	
	ORP KALİBRASYON	
	ORP OKU	
5 - PROGRAM MENU	SİFRE	

3.2.1.POLARITE PERYODU

Kullanılan suyun fiziksel özellikleri coğrafi bölgelere göre değişkenlik gösterse de içerisinde mutlaka belli oranlarda kalsiyum, magnezyum, demir ve diğer mineralleri bulundurması kaçınılmazdır. Su soğuk iken askıda bulunan bu mineraller elektroliz esnasında sudan ayrışırlar bir kısmı hazne içerisindeki elektrotlara yapışır. Belli bir süre sonra elektrotların üzeri tamamen kireç olarak tabir edilen maddeyle kaplanır. Kireç tabakası yalıtkan özellikte olduğundan elektrotlar arası elektrik akışını zorlaştırır. Bunun sonucunda klor üretim verimi düşer. Elektrotlarda oluşan bu kirecin belli aralıklarla temizlenmesi gerekmektedir.

Bu temizleme işlemini cihaz; polarizasyonu değiştirerek otomatik olarak yapabilme özelliğine sahiptir. Polarite peryod sayfası polarizasyon değiştirme süresinin ayarlandığı sayfadır. **OK** butonuna bir kez basılarak sayfa içerisine girilir, sayfadan çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Ayar sayfasına girildiğinde **UP** ve **DOWN** yön butonlarıyla parametre değeri değiştirilir. İstenilen değer verildiğinde **OK** butonu ile seçilip kaydedilir.

3.2.2.DiL

Cihazın çalışma dili ayarının yapıldığı sayfadır. Cihaza tanımlı olan İNGİLİZCE – TÜRKÇE – FRANSIZCA – BULGARCA – ALMANCA – MACARCA – İSPANYOLCA dilleri bulunur. **OK** butonuna bir kez basılarak sayfa içerisine girilir, sayfadan çıkmak için ise **MENU** butonuna bir kez basılması gerekir. **UP** ve **DOWN** yön butonlarıyla çalışma dili değişikliği yapılır. İstenilen çalışma dili ekrana geldiğinde **OK** butonuna bir kez basılır, çalışma dili seçilerek kaydedilir.







┙



3.2.3.PH AYARLARI

pH ayarlarının yapıldığı sayfadır. **OK** butonuna bir kez basılarak sayfa içerisine girilir, sayfadan çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Sayfa içerisinde bulunan parametreler arasında geçiş yapmak için **UP** ve **DOWN** yön butonları kullanılır.

NOT: pH ölçüm özelliği bulunmayan modellerde bu ayar sayfası bulunmaz.

3.2.3a.pH Mod

pH düşürücü veya yükseltici sıvısının dozajlama modunun ayarlandığı parametredir. **OK** butonuna bir kez basılarak parametre içerisine girilir, çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisinde bulunan Mod arası geçiş yapmak için **UP** ve **DOWN** butonları kullanılır. Bu parametrede üç seçenek bulunur.(**OFF – ON – AUTO**)

PH AYARLAR ┙ t Ť

PH MOD

PH AYARLAR

pH Mod OFF: Bu Mod ayarlandığında, pH kısmı dozajlama kapatılmış olur, dozaj pompası enerjisini keser. **OK** butonuna bir kez basılarak mod seçilir ve sisteme kaydedilir.

pH Mod ON: Bu Mod ayarlandığında, pH kısmı dozaj pompası sürekli enerjilidir ve dozajlama yapar. Güvenlik açısından sadece parametre üzerinde ON konuma alınabilir. **OK** butonuna bir kez basılarak mod seçildiğinde sisteme AUTO olarak kaydedilir.

pH Mod AUTO: Bu Mod ayarlandığında, pH sensöründe okunan değer ve SET edilen değer doğrultusunda düşürücü veya yükseltici sıvının dozajlaması yapılır. İstenen değer bulunduğunda otomatik olarak dozajlama durur.

3.2.3b.pH Set

pH set değeri; havuzun sahip olması istenen pH değeridir. Sensörler ile okunan değer burada girilen set değeri ile karşılaştırılarak dozajlama yapılır. Dozajlanan pH düşürücü veya yükseltici sıvı havuzun istenen pH değerinde olmasını sağlar.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Buradaki değer **UP** ve **DOWN** yön butonlarıyla değiştirilir. İstenilen değer verildiğinde **OK** butonu ile seçilip kaydedilir ve otomatik olarak parametreden çıkılır.

3.2.3c.pH Tolerans

pH tolerans; ayarlanan pH set değerinden kayma payıdır. Bu değerin verilmesinin sebebi ölçümdeki dalgalanmanın etkisiyle dozajlamanın oluşmamasıdır. Böylelikle daha kararlı bir sistem oluşturulmuş olur.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Buradaki değer **UP** ve **DOWN** yön butonlarıyla değiştirilir. İstenilen değer verildiğinde **OK** butonu ile seçilip kaydedilir ve otomatik olarak parametreden çıkılır. PH AYARLAR PH MOD:OFF

PH AYARLAR PH MOD:ON

PH AYARLAR PH MOD:AUTO

PH AYARLAR PH SET

PH AYARLAR PH SET 07.20

PH AYARLAR PH TOL.

PH AYARLAR PH TOL. 00.10

3.2.3d.pH Buffer Sec

pH buffer sel; dozajlama yapılacak olan sıvının pH düşürücü veya pH yükseltici olduğunun cihaza tanıtıldığı parametredir.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Buradaki durum **UP** ve **DOWN** yön butonlarıyla değiştirilir. İstenilen durum verildiğinde **OK** butonu ile seçilip kaydedilir ve otomatik olarak parametreden çıkılır.

3.2.3e.pH Kalibrasyon

pH sensörleri karakteristik yapılarından dolayı ölçüm değerleri zamanla değişiklik göstermektedir. Sensör ölçüm değerinde oluşan değişiklik cihazın göstermiş olduğu değeri etkilemektedir. Bu nedenle sensörler belirli aralıklarla pH değeri bilinen sıvılar ile kalibre edilmelidirler(ph4-pH7). Bu işlemi yapabilmek için pH Kalibrasyon parametresi kullanılır.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. pH sensörü ilk önce pH4 sıvısına daldırılır ve ekrandaki timer sıfırlanana kadar sensör sıvının içinde bırakılır.

Timer sıfırlandığında pH sensörünün ph7 sıvısına daldırılması gerekir ve ekrana bir ileti gelir. Sensör pH4 sıvısından çıkartılıp kurulanır ve pH7 sıvısına daldırılıp **OK** butonuna bir kez basılır. Ekrandaki timer sıfırlanana kadar sensör sıvının içinde bırakılır. Timer sıfırlandığında pH sensörü kalibre edilmiş olur.

3.2.3f.pH Oku

pH oku parametresi; pH sensörünün okuduğu anlık değerin gösterildiği parametredir. **OK** butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir.

Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Bir işlem yapılmaz sadece sensörün okuduğu değer anlık olarak görüntülenir.

3.2.3g.pH Lvl. Sec

pH lvl sec parametresi; dozajlama yapılacak olan pH düşürücü veya yükseltici sıvısı tankına bağlı opsiyonel sensörün tanıtıldığı parametredir. **OK** butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir.

PH LVL. SEC. OFF: Dozajlama yapılacak sıvı tankına bağlı sensör olmadığı durumlarda seçilmelidir.

PH LVL. SEC. ON: Dozajlama yapılacak sıvı tankına bağlı sensör bulunuyor ise seçilmelidir. Bağlı olan sensör sayesinde; cihaz tanktaki sıvı boşaldığında veya belirlenen seviyenin altına indiğinde uyarı verir. Bu durumda cihaz dozaj pompasını durdurur ve pompanın sıvı olmadan çalışıp zarar görmesini engeller.

PH AYARLAR PH BUF. SEC

PH AYARLAR PH BUF. SEC (-)



TIMER : 58

PH AYARLAR PH OKU

PH AYARLAR PH OKU pH=07.00



3.2.4.ORP AYARLARI

ORP (RX) ayarlarının yapıldığı sayfadır. **OK** butonuna bir kez basılarak sayfa içerisine girilir, sayfadan çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Sayfa içerisinde bulunan parametreler arasında geçiş yapmak için **UP** ve **DOWN** butonları kullanılır.

ORP AYARLAR ↓ ↑ ↔

NOT: ORP(RX) ölçüm özelliği bulunmayan modellerde bu ayar sayfası bulunmaz.

3.2.4a.ORP Mod

ORP yükseltici sıvısının dozajlama modunun ayarlandığı parametredir. **OK** butonuna bir kez basılarak parametre içerisine girilir, çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisinde bulunan Mod arası geçiş yapmak için **UP** ve **DOWN** butonları kullanılır. Bu parametrede üç seçenek bulunur. (**OFF – ON – AUTO**)

ORP Mod OFF: Bu Mod ayarlandığında, Cl üretimi kapatılmış olur. **OK** butonuna bir kez basılarak mod seçilir ve sisteme kaydedilir.

ORP Mod ON: Bu Mod ayarlandığında, Cl üretimi sürekli açıktır. **OK** butonuna bir kez basılarak mod seçilir ve sisteme kaydedilir.

ORP Mod AUTO: Bu Mod ayarlandığında, ORP sensöründe okunan değer ve SET edilen değer doğrultusunda Cl üretimi yapılır. İstenen değer bulunduğunda otomatik olarak Cl üretimi durur.

3.2.4b.ORP Set

ORP set değeri; havuzun sahip olması istenen ORP(RX) değeridir. Sensörler ile okunan değer burada girilen set değeri ile karşılaştırılarak dozajlama yapılır. Dozajlanan sıvı havuzun istenen ORP(RX) değerinde olmasını sağlar.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Buradaki değer **UP** ve **DOWN** yön butonlarıyla değiştirilir. İstenilen değer verildiğinde **OK** butonu ile seçilip kaydedilir ve otomatik olarak parametreden çıkılır.

3.2.4c.ORP Tolerans

ORP(RX) tolerans; ayarlanan ORP(RX) set değerinden kayma payıdır. Bu değerin verilmesinin sebebi ölçümdeki dalgalanmanın etkisiyle dozajlamanın oluşmamasıdır. Böylelikle daha kararlı bir sistem oluşturulmuş olur.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Buradaki değer **UP** ve **DOWN** yön butonlarıyla değiştirilir. İstenilen değer verildiğinde **OK** butonu ile seçilip kaydedilir ve otomatik olarak parametreden çıkılır.

ORP AYARLAR ORP MOD ORP AYARLAR ORP MOD:OFF ORP AYARLAR ORP MOD:ON ORP AYARLAR ORP MOD:AUTO

ORP AYARLAR ORP SET

ORP AYARLAR ORP SET 0700

ORP AYARLAR ORP TOL.

ORP AYARLAR ORP TOL. 0010



3.2.4d.ORP Kalibrasyon

ORP(RX) sensörleri karakteristik yapılarından dolayı ölçüm değerleri zamanla değişiklik göstermektedir. Sensör ölçüm değerinde oluşan değişiklik cihazın göstermiş olduğu değeri etkilemektedir. Bu nedenle sensörler belirli aralıklarla ORP(RX) değeri bilinen sıvılar ile kalibre edilmelidirler(475mV). Bu işlemi yapabilmek için ORP Kalibrasyon parametresi kullanılır.

OK butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir. Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. ORP(RX) sensörü 475mV sıvısına daldırılır ve ekrandaki timer sıfırlanana kadar sensör sıvının içinde bırakılır. Timer sıfırlandığında ORP(RX) sensörü kalibre edilmiş olur.

3.2.4e.ORP Oku

ORP oku parametresi; ORP sensörünün okuduğu anlık değerin gösterildiği parametredir. **OK** butonuna bir kez basılarak parametre içerisine girilir, parametreden çıkmak için ise **MENU** butonuna bir kez basılması gerekir.

Parametre içerisine girdikten sonra yandaki gibi bir ekran görüntülenir. Bir işlem yapılmaz sadece sensörün okuduğu değer anlık olarak görüntülenir.

3.2.5.PROGRAM MENU

GEMAŞ teknik personelinin müdahale edebildiği ayar sayfasıdır. Bu sayfada değişiklik yapmak cihazın genel çalışmasına zarar verebilir.

4 – TEMİZLİK – BAKIM TALİMATLARI

4.1.Elektrot Temizliği

Kullanılan suyun fiziksel özellikleri coğrafi bölgelere göre değişkenlik gösterse de içerisinde mutlaka belli oranlarda kalsiyum, magnezyum, demir ve diğer mineralleri bulundurması kaçınılmazdır. Su soğuk iken askıda bulunan bu mineraller elektroliz esnasında sudan ayrışırlar bir kısmı hazne içerisindeki elektrotlara yapışırlar. Belli bir süre sonra elektrotların üzeri tamamen kireç olarak tabir edilen maddeyle kaplanır. Kireç tabakası yalıtkan özellikte olduğundan elektrotlar arası elektrik akışını zorlaştırırlar. Bunun sonucunda klor üretim verimi düşer. Elektrotlarda oluşan bu kirecin belli aralıklarla temizlenmesi gerekmektedir.

Bu temizleme işlemini cihaz; polarizasyonu değiştirerek otomatik olarak yapabilme özelliğine sahiptir. Fakat kalsiyum derişiminin çok yüksek olduğu durumlarda bu özellik tam olarak kireç tortusunu ortadan kaldıramayabilir. Düzenli olarak gözle hücrede kireç tortusunu kontrol edip, gerekli durumlarda hücre elle temizlenmelidir.

- 1- Pompa ve tuz klor jeneratörünü kapatın.
- 2- Elektrot hücresinin su giriş ve su çıkış vanalarını kapatın.
- **3-** Rakorlu elektrot kafasını açın, elektrot kablosunu düzgün bir şekilde terminalden sökün ve elektrodu hazneden çıkartın.
- 4- İdeal olarak bir gün boyunca elektrodun kuruması beklenirse kireç tortusu kendini serbest bırakır. İşlem sırasında elektrodun hassas kapağının zarar görmemesine özen gösterin ve dikkat edin. Bu işlem sırasında elektrodu çizebilecek metal malzeme ile kesinlikle vurmayın. Kireç tortusunu çözmek için basınçlı su kullanılabilir.
- 5- Eğer basınçlı su kireç tortusunu kaldıramadıysa, elektrodu %20 hidroklorik asit çözeltisinin içine batırabilirsiniz. Elektrodun üst kısmında bulunan terminallerin çözeltiye temas etmemelidir.
- **6-** Temizlikten hemen sonra elektrot temiz su ile durulanmalı, terminallerin olduğu yer dikkatlice kurutulmalı ve tekrar monte edilmelidir.

Elektrot kesinlikle asit içerisinde 5 dakikadan fazla bekletmeyin! Metal objelerle elektrodu çizmeyin! Güvenlik nedeniyle asidi suyun içinde bulundurun!



GEMAŞ Genel Mühendislik Mekanik San.ve Tic.A.Ş.

İTOB Organize Sanayi Bölgesi 10001 Sok.No:28 Menderes/İZMİR TÜRKEY GEMAS Tel:0232 799 0 333 Fax:0232 799 0 330 www.gemas.com.tr info@gemas.com.tr "Pad Technologu"

ORP AYARLAR ORP KALIBRASYON

ORP CALIBRATION INSERT PRB 475mv

ORP VAL: 0493 mv TIMER: 54

ORP AYARLAR ORP OKU

ORP AYARLAR ORP OKU 0475

4.2.Tavsiyeler

GSC tuz klor jeneratörünün bipolar hücreleri özel bir teknik kullanılarak yüksek kalite standartlarının altında olağan üstü bir süre ve direnç kazandırılarak üretilmiştir. Fakat elektrottan tam ve en uzun performansı almanızı engelleyici faktörler bulunmaktadır. Bunlar:

- Elektrodun yüzeyinde kireç tortusu ile çalıştırmak
- Aşırı klor konsantrasyonu (3.00 ppm üzeri klor aşındırıcı etkidedir.)
- Yüksek veya düşük pH ile çalışma
- Tuzsuz veya yüksek konsantrasyonda tuz ile çalışma
- 10 °C altındaki suda çalıştırma
- Klorinatör çalışırken tuz ekleme
- Skimmerde veya dip süzgecini yerleştirmeden pH düzenleyici enjekte etmek

Hücre terminallerini periyodik olarak kontrol etmeniz ve kükürtlenmeye karşı yağlamanız tavsiye edilir. Ekipmanı kapatmanız gereken durumlar:

- Susuz çalışma
- Filtre temizlenirken
- Havuz boşaltılırken
- Su donduğunda
- Hücre temizlenirken

Arıza Kodu	Muhtemel Arıza	Çözüm Yolu
ERR1	Kablo kopuk veya temas etmiyor	Kabloyu ve bağlantı terminallerini kontrol edin, gerekiyorsa değiştirin.
	Elektrot kablo bağlantısında problem var	Elektrot kablo bağlantı terminallerini kontrol edin.
	Yoğun kireç	Hücreden kireci temizleyin ve polarite periyodunu düşürün.
ERR2	Kireç var	Hücreden kireci temizleyin ve polarite periyodunu düşürün.
	Su çok sert	Suyu yumuşatın.
ERR3	Cihaz çıkışında kısa devre var	Cihaz elektrot kablosunu, elektrot bağlantı terminallerini kontrol edin ve gerekiyorsa değiştirin.
ERR4	Elektronik kart arızası	Üretici ile iletişime geçin.

4.3 - Arıza Kodları ve Önerilen Çözüm Yolları

5 – GARANTİ - SATIŞ SONRASI SERVİS - YEDEK PARÇALAR

- 3. Elektronik hücre ve doğrultucu iki yıl garanti altındadır.
- 4. Ürünler, aşağıda bulunan maddeler doğrultusunda garanti kapsamı dışına alınır.
 - **a.** Ürünün kullanma talimatına aykırı kullanımından doğan arızalar.
 - **b.** Yanlış elektrik bağlantılarından doğan arızalar.
 - c. Çarpma ve benzeri kazalardan doğan arızlar.
 - d. Redresöründe sudan doğacak arızlar.
 - e. By pass devresi (bağlantı şemasına uygun) olmadan çalışmasından doğacak arızlar.
 - f. Redresörü kapatmadan skimmere asit dökülmesinden kaynaklanan arızalar.
 - **g.** Dezenfeksiyon için kullanılan asit tankının bulunduğu makine dairesi içerisinde yetersiz hava sirkülasyonunun olmasından kaynaklanan arızalar.
 - **h.** Puritron; pompa, filtre ve çok yollu vana da dahil olmak üzere temizlik ekipmanlarıyla kesinlikle aynı ortamda bulundurulmamalıdır.



GEMAŞ Genel Mühendislik Mekanik San.ve Tic.A.Ş.

İTOB Organize Sanayi Bölgesi 10001 Sok.No:28 Menderes/İZMİR TÜRKEY Tel:0232 799 0 333 Fax:0232 799 0 330 www.gemas.com.tr info@gemas.com.tr